


Use of Biometric Device - Cogent CSD200

Note: All Browsers should be up to date.

[Contact Your Supplier for Registration of Device if anything required at the time of purchasing device]

Download Link:

<https://pbrdms.precisionbiometric.co.in/rdpayments/Instructions.aspx>

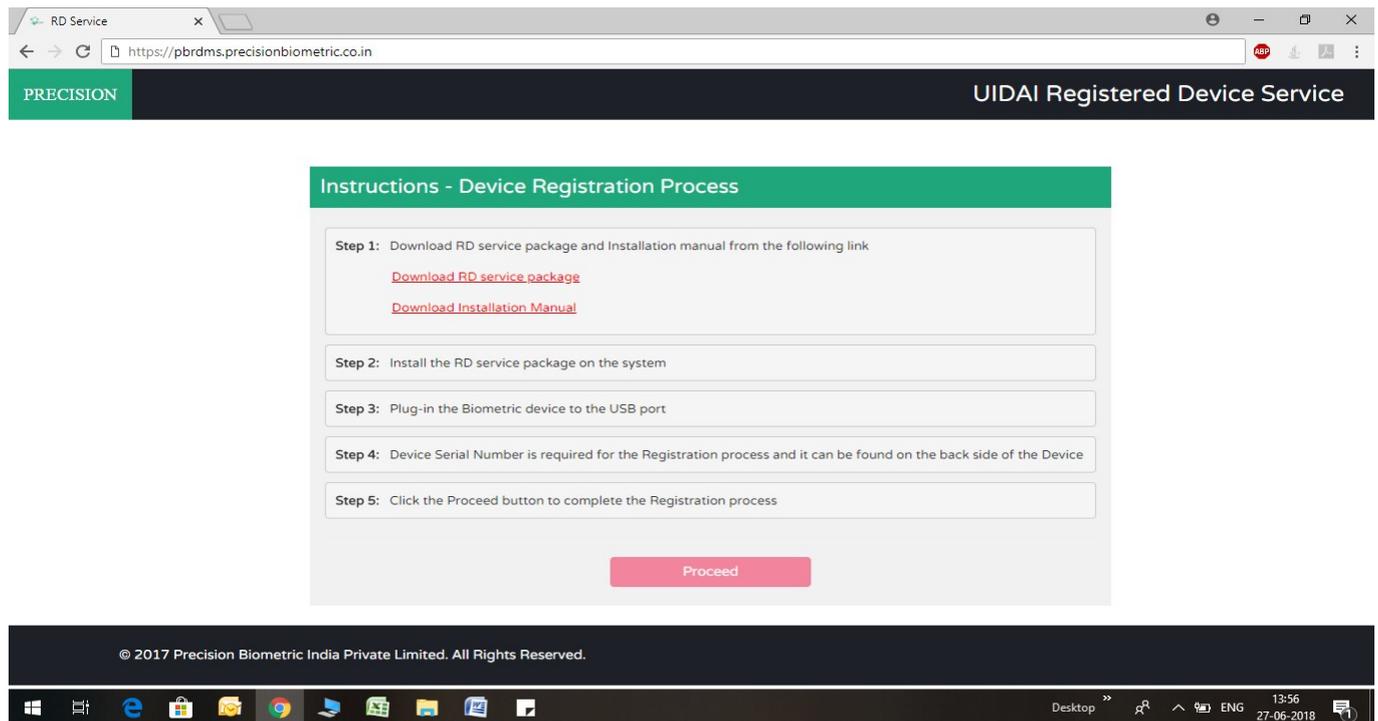

RD Service

PRECISION UIDAI Registered Device Service

Instructions - Device Registration Process

Step 1: Download RD service package and Installation manual from the following link

- [Download RD service package](#)
- [Download Installation Manual](#)

Step 2: Install the RD service package on the system

Step 3: Plug-in the Biometric device to the USB port

Step 4: Device Serial Number is required for the Registration process and it can be found on the back side of the Device


Step 5: Click the Proceed button to complete the Registration process

Proceed

© 2017 Precision Biometric India Private Limited. All Rights Reserved.

OR

Search in Google 'Download RD Service for Cogent CSD200' and Click on 1st or 2nd link

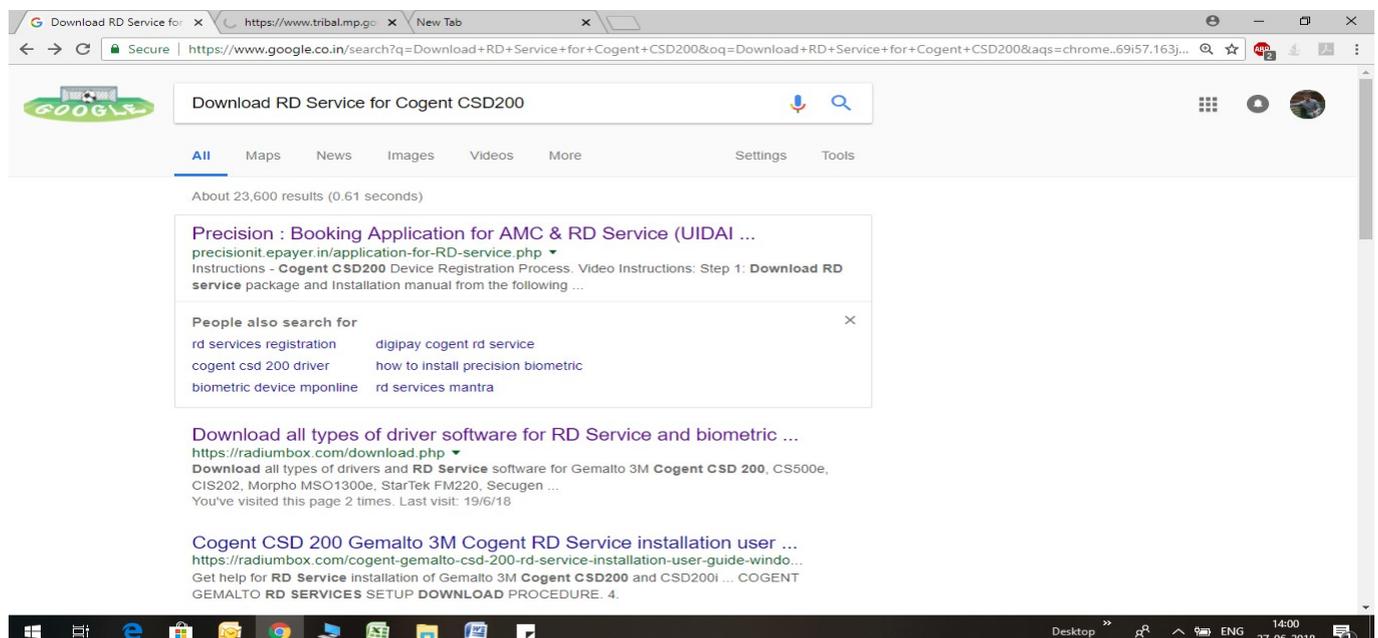

Download RD Service for Cogent CSD200

About 23,600 results (0.61 seconds)


Precision : Booking Application for AMC & RD Service (UIDAI ...
precisionit.epayer.in/application-for-RD-service.php
Instructions - Cogent CSD200 Device Registration Process. Video Instructions: Step 1: Download RD service package and Installation manual from the following ...

People also search for

- rd services registration
- digipay cogent rd service
- cogent csd 200 driver
- how to install precision biometric
- biometric device mponline
- rd services mantra


Download all types of driver software for RD Service and biometric ...
<https://radiumbbox.com/download.php>
Download all types of drivers and RD Service software for Gemalto 3M Cogent CSD 200, CS500e, CIS202, Morpho MSO1300e, StarTek FM220, Secugen ...
You've visited this page 2 times. Last visit: 19/6/18

Cogent CSD 200 Gemalto 3M Cogent RD Service installation user ...
<https://radiumbbox.com/cogent-gemalto-csd-200-rd-service-installation-user-guide-windo...>
Get help for RD SERVICE installation of Gemalto 3M Cogent CSD200 and CSD200i ... COGENT GEMALTO RD SERVICES SETUP DOWNLOAD PROCEDURE. 4.

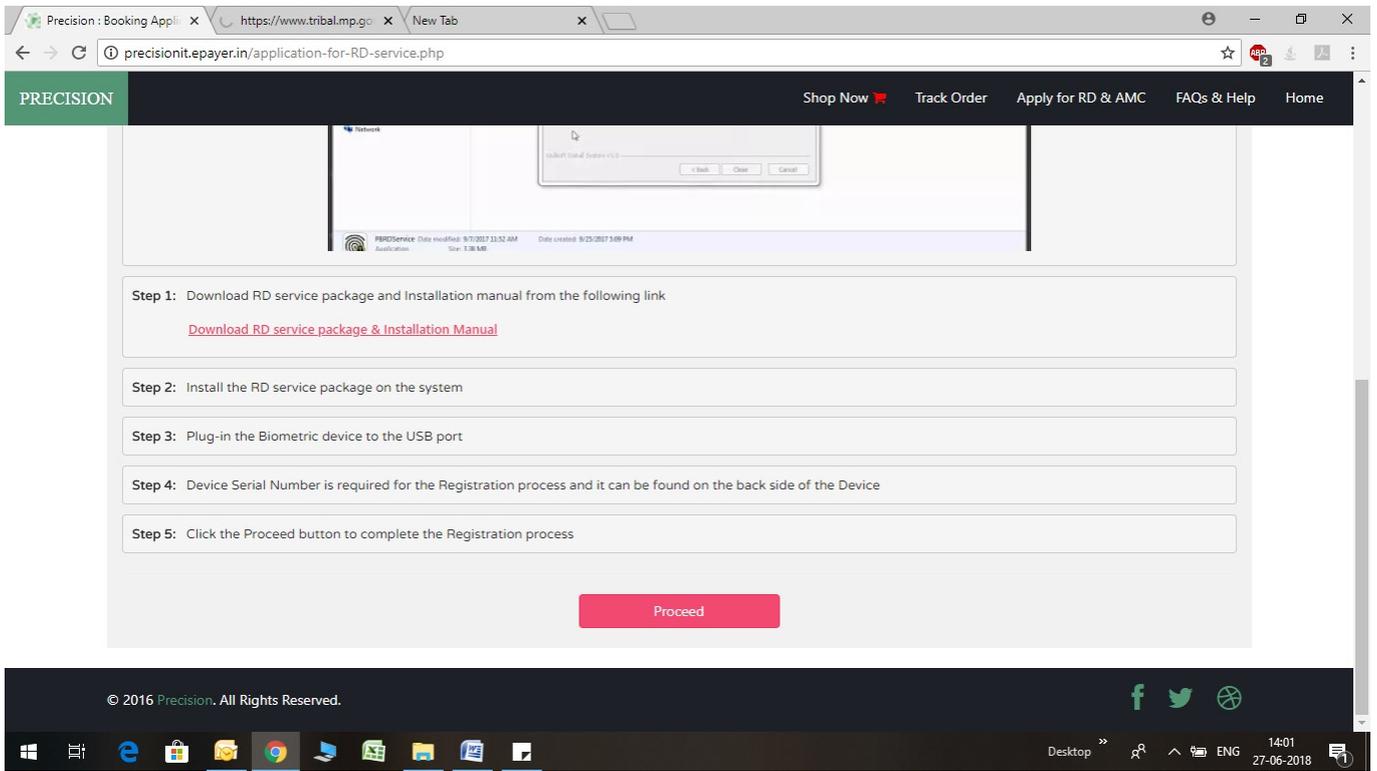

Step 1: Download RD Service Package

Step 2: Install/Run PBRDService.exe (RD Services)

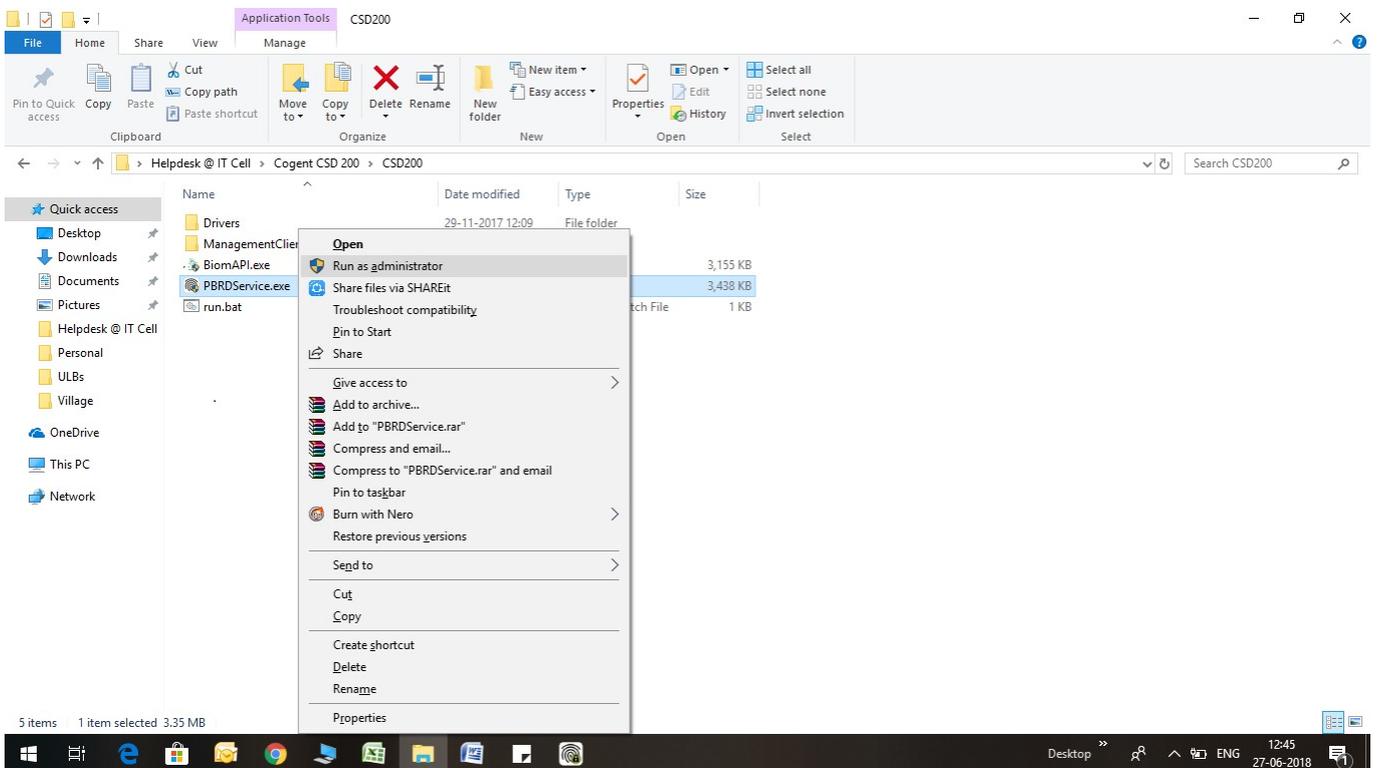

Step 3: Close all the running browser and make sure that fingerprint scanner is not plugged in to the system.

Step 4: Restart PC


It is ready to use. If required, follow process mentioned on next pages.

Browser Configuration for Web RD Test (If Required)

1) Chrome

Open chrome browser and write below in url and click on Enable “Allow invalie certificates for resources loaded from localhost” and then click “RELAUNCH NOW”

chrome://flags/#allow-insecure-localhost

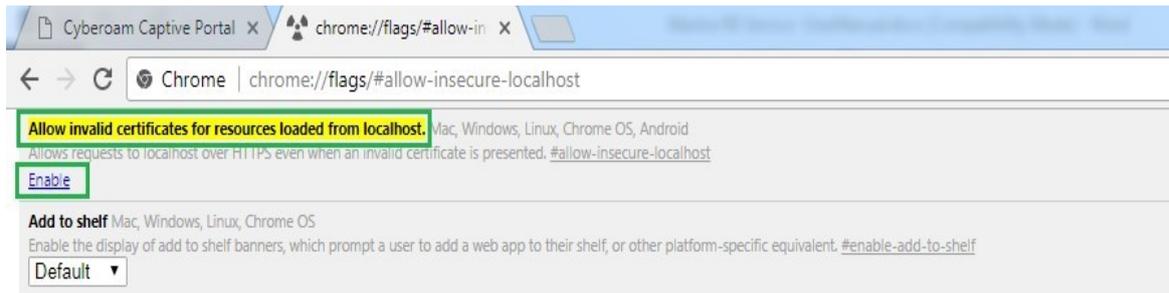


Your changes will take effect the next time you relaunch Google Chrome.

RELAUNCH NOW



2) Firefox


Open Firefox browser and write below in url and click on “I Understand the Risks” ,click “Add Exception” , it will open Add Security Exception popup and then click “Confirm Security Exception”.

https://127.0.0.1:8005

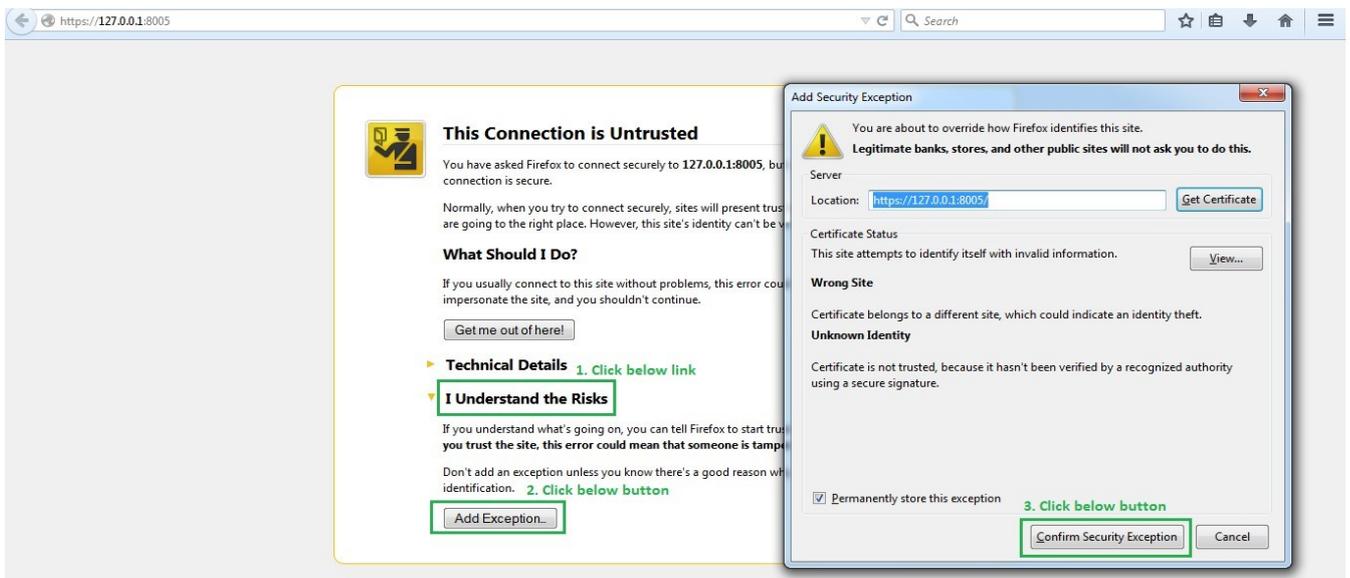

3) Internet Explorer

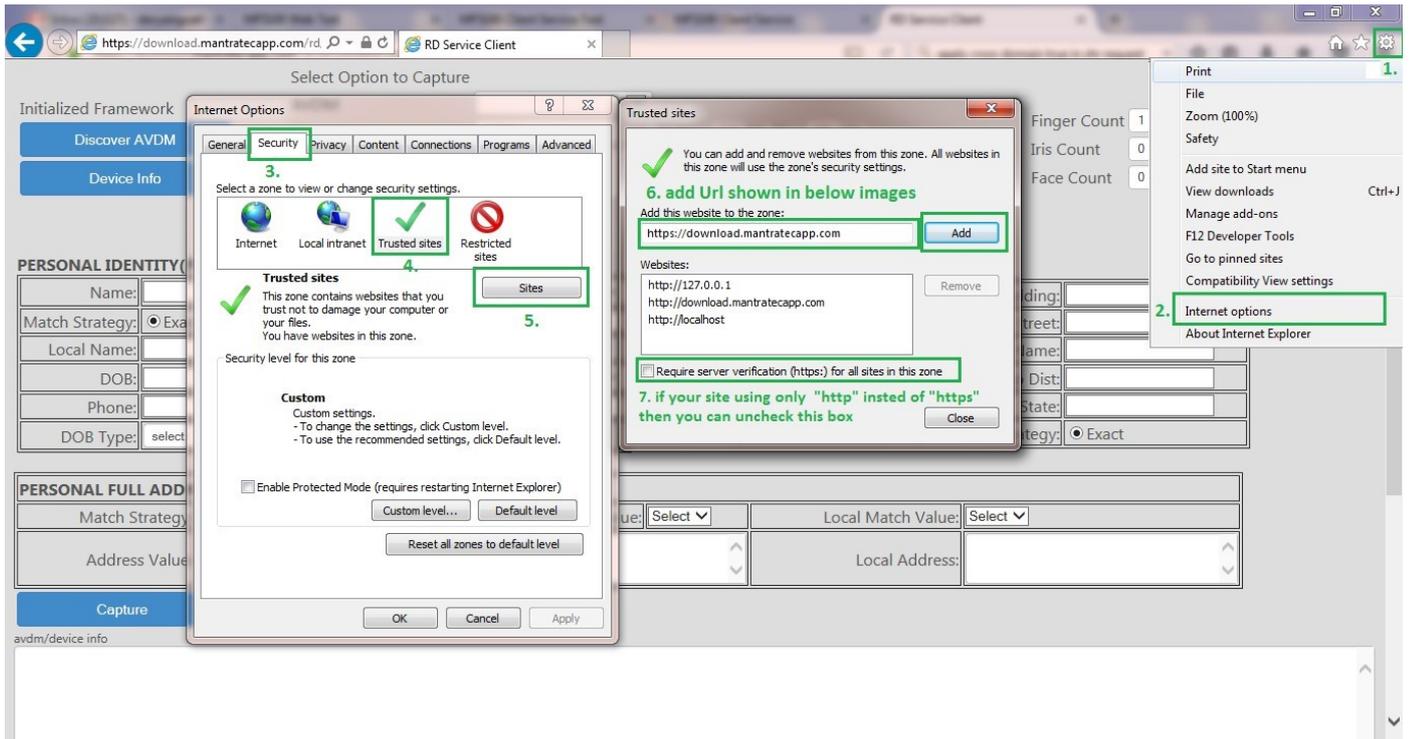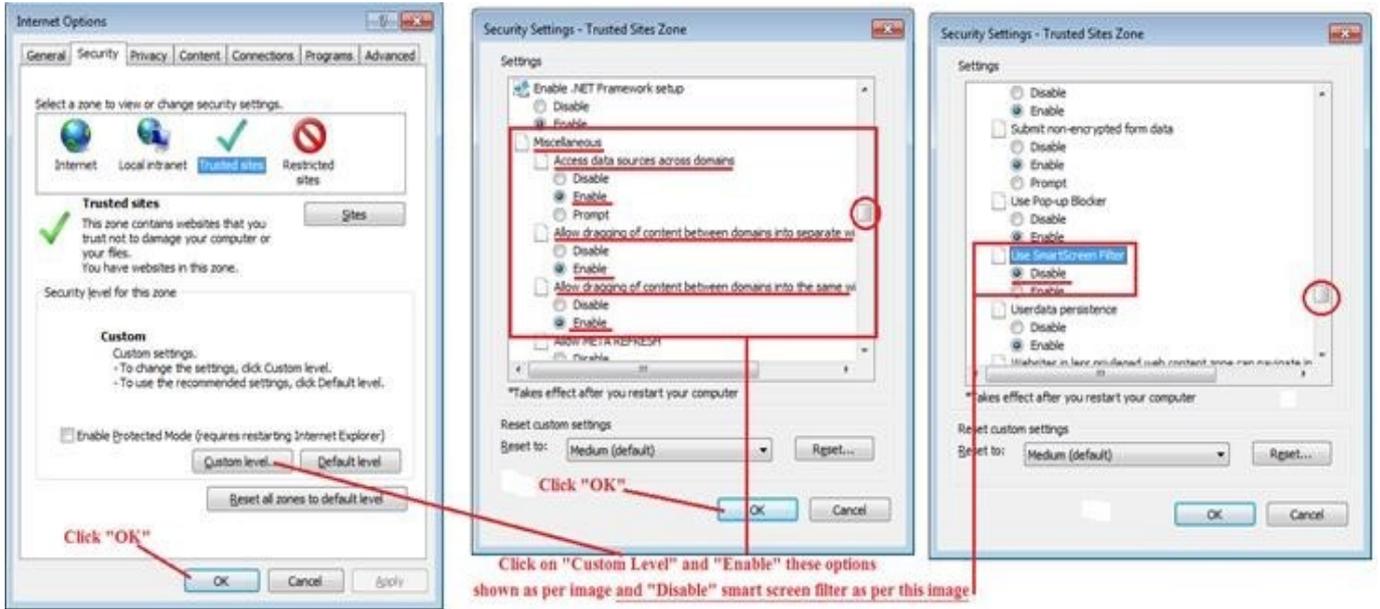

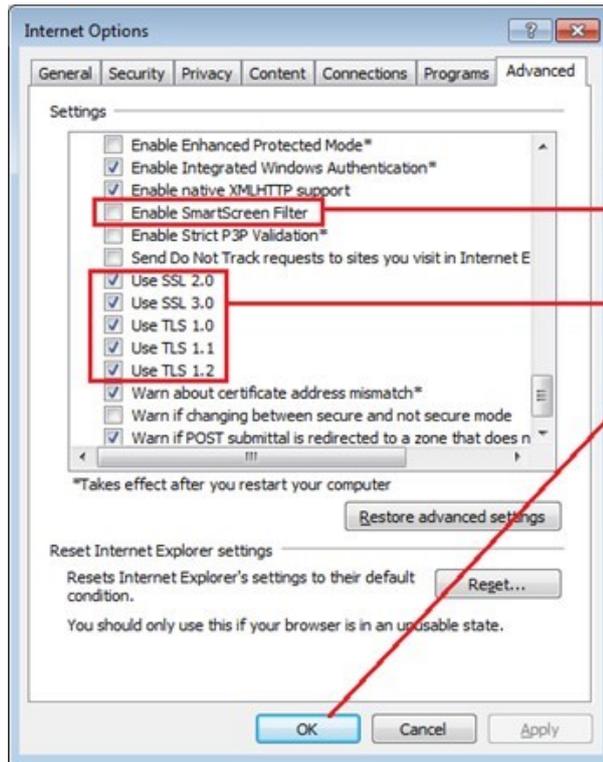

Uncheck this check box if it is checked.


Check all these check box if it is unchecked

Click "OK"


Restart "Internet Explorer" browser and then test again for capture finger


It is ready to use. If required, follow process mentioned below.

Step 1: Install/Run BiomAPI.exe

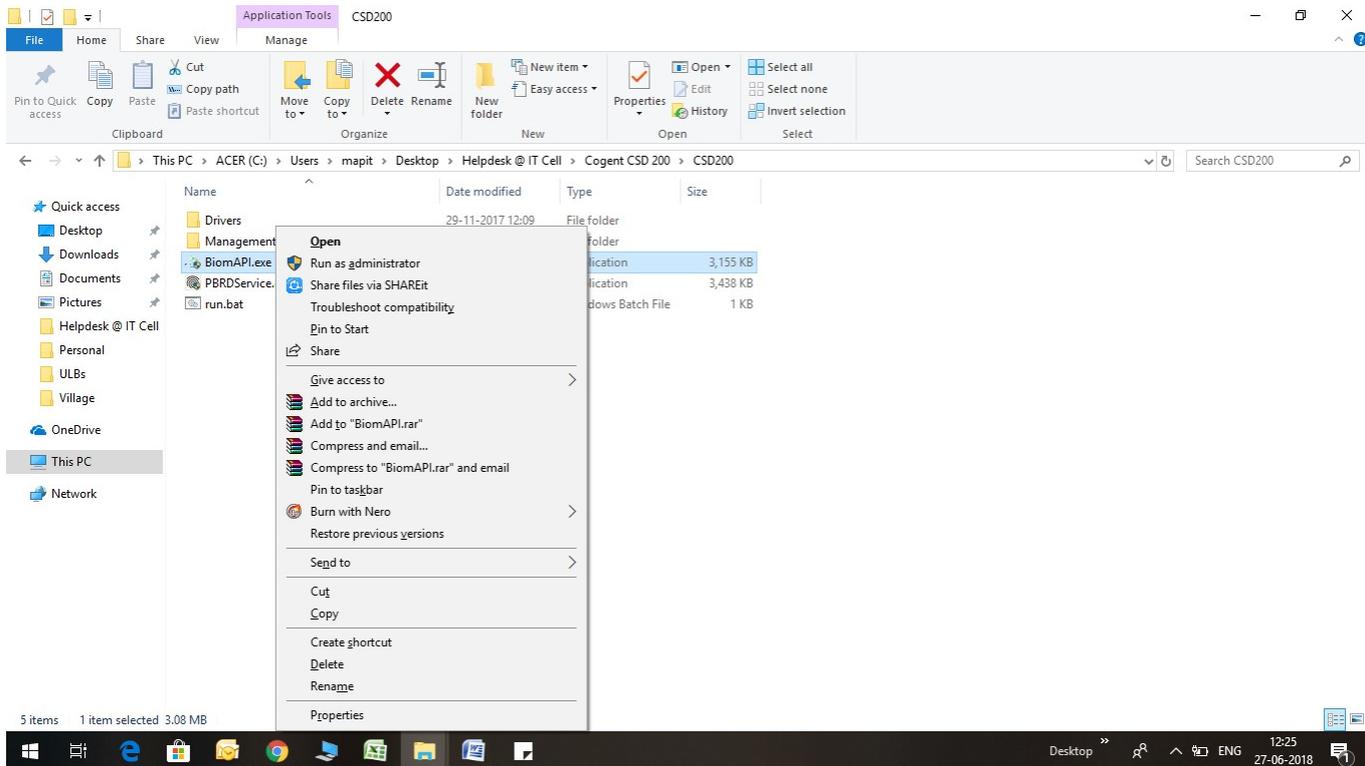

Step 2: Close all the running browser and make sure that fingerprint scanner is not plugged in to the system.

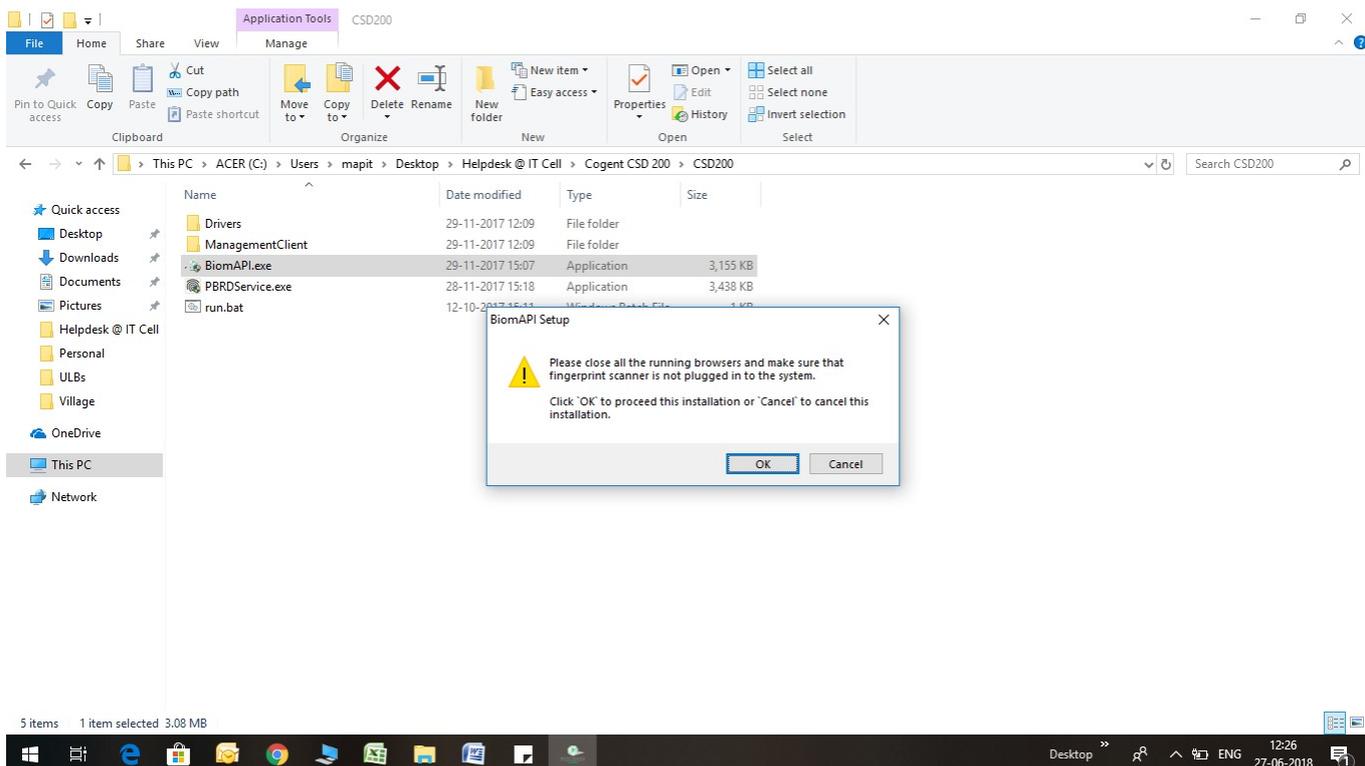

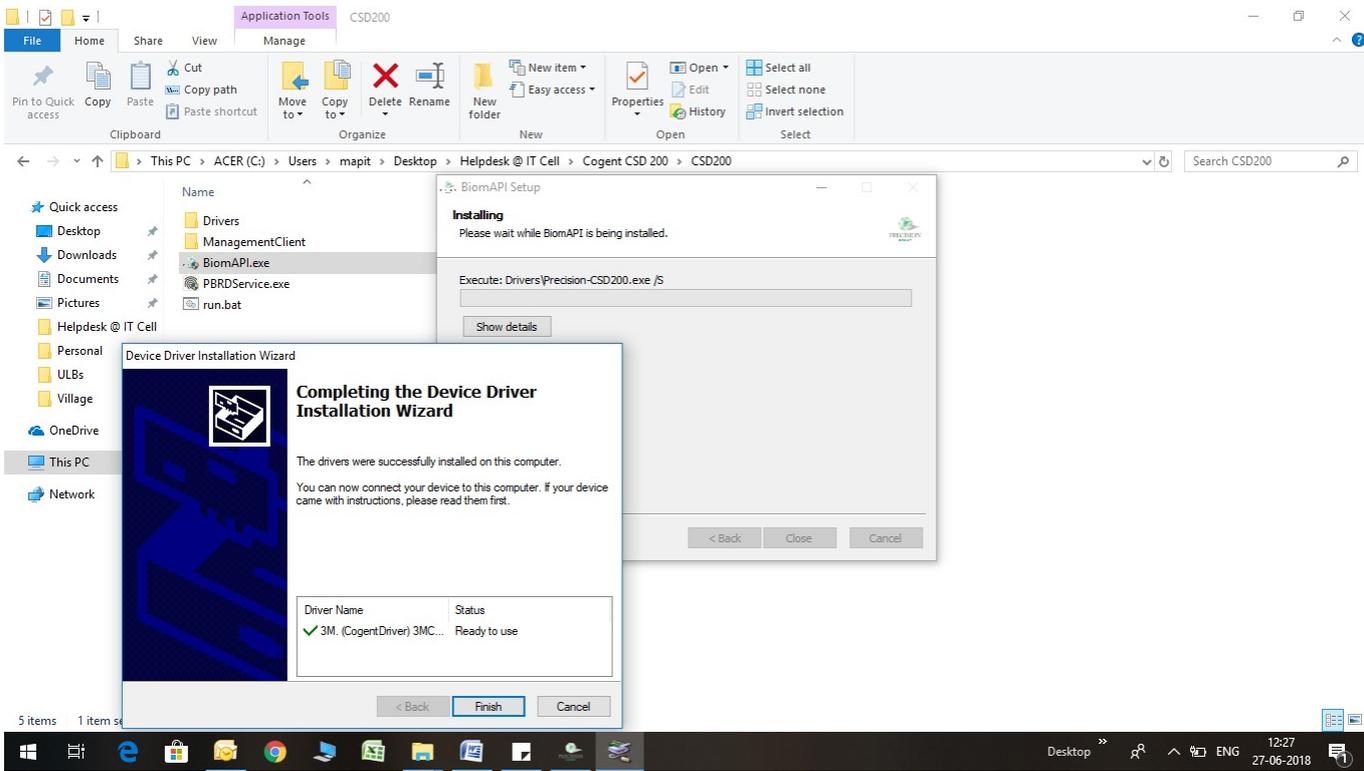

Step 3: Restart PC