

Guidelines
Of

MORPHO
Biometric Machine Installation

In
Windows based Computer System

Chapter 01

MORPHO Device Driver Installation

1. How to Install MARPHO Biometric Device Driver?

a. User can download the [Driver](#) link as below mentioned...

http://dbt.mpdage.org/BioDevice_Setup/Morpho_RD_2.0.1.13_beta.zip


क्र.	कंपनी का नाम	संपर्क व्यक्ति	मोबाइल नं.	ई-मेल आईडी	डाउनलोड सेटअप	इंस्टालेशन गाइड
1	मॉर्फो	श्री संजीव कुमार	09999978047, 09267345384	sales@itssolution.in	डाउनलोड	डाउनलोड 

b. User can copy & paste at the URL and press Enter key to download

c. Right clicks on Biometric Device setup and extract the files


d. After extract the setup file follow the below steps are...

➤ Clicks on “Morpho_RD_2.0.1.13_beta” folder

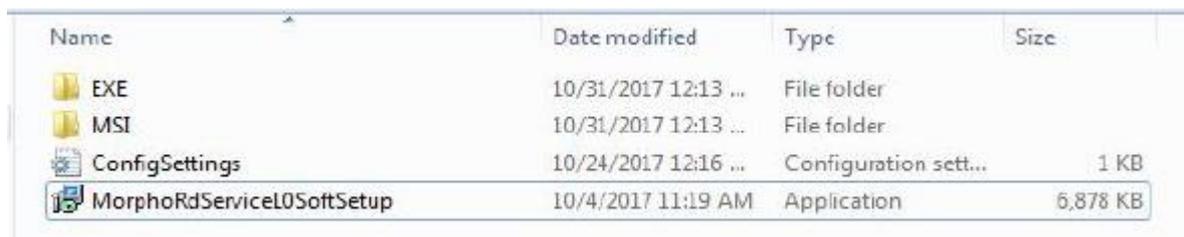


Name	Date modified	Type	Size
EXE	10/31/2017 12:13 ...	File folder	
MSI	10/31/2017 12:13 ...	File folder	
ConfigSettings	10/24/2017 12:16 ...	Configuration sett...	1 KB
MorphoRdServiceL0SoftSetup	10/4/2017 11:19 AM	Application	6,878 KB

➤ Clicks on MorphoRdServiceL0SoftSetup.exe file

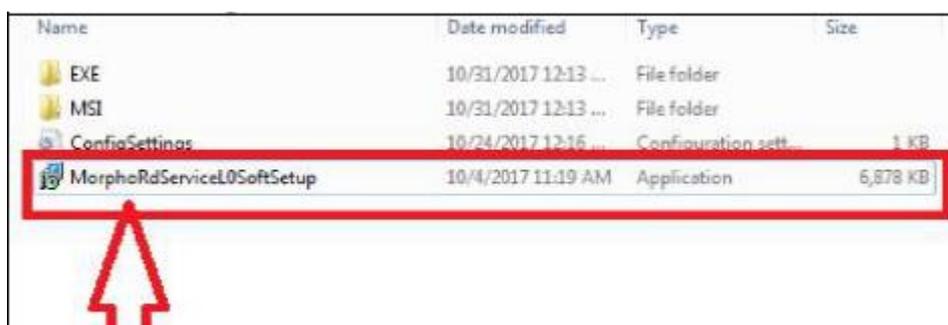


Name	Date modified	Type	Size
EXE	10/31/2017 12:13 ...	File folder	
MSI	10/31/2017 12:13 ...	File folder	
ConfigSettings	10/24/2017 12:16 ...	Configuration sett...	1 KB
MorphoRdServiceL0SoftSetup	10/4/2017 11:19 AM	Application	6,878 KB

- Right clicks on MorphoRdServiceL0SoftSetup.exe file, then clicks on “**Run as administrator**”

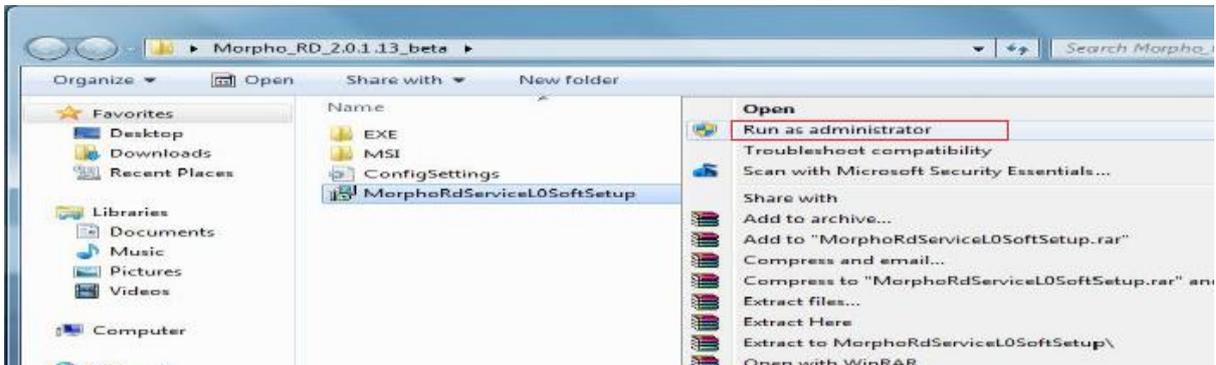

- Click Yes button of User Account Control if appeared at screen other wise below screens are appeared step by step.....

- After click on run as administrator

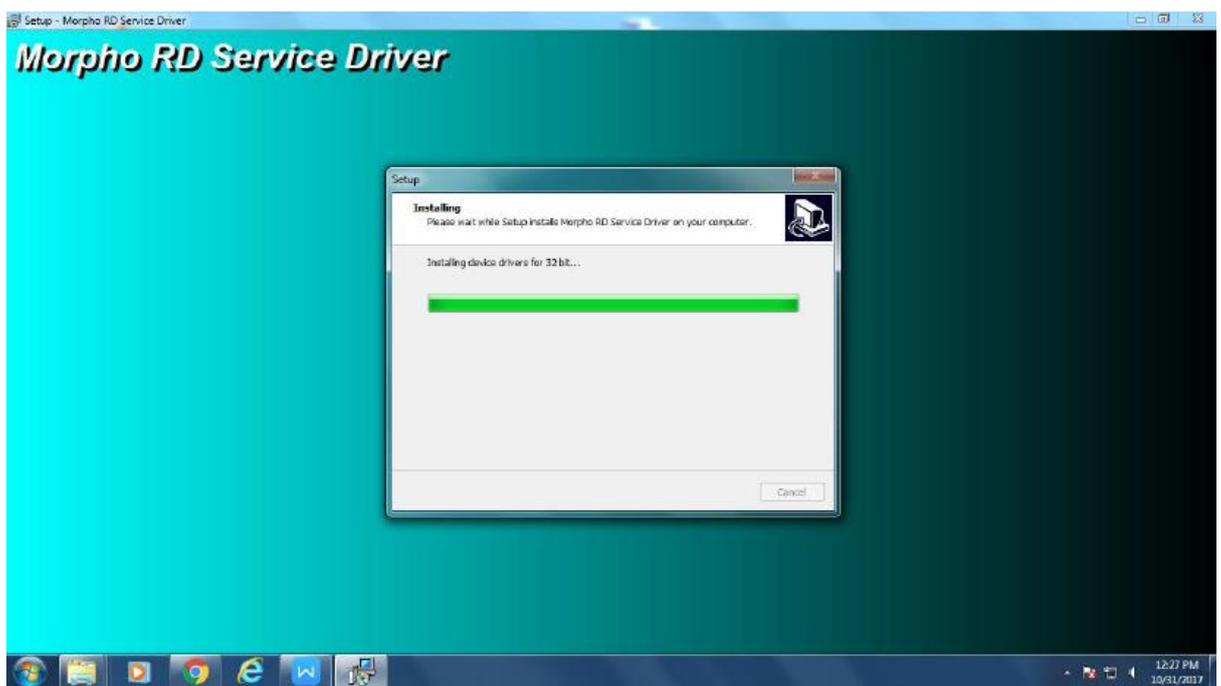

Note: Please Restart your Computer!



Chapter 02

MORPHO

Biometric Activation In your System


2. How to activate MORPHO Biometric Device in your system?

a. After installation setup on your pc open C drive and click on


Name	Date modified	Type	Size
EXE	10/4/2017 11:19 AM	File folder	
MSI	10/4/2017 11:21 AM	File folder	
ConfigSettings	10/24/2017 12:16 ...	Configuration sett...	1 KB
MorphoRdServiceLOsoftSetup	10/4/2017 11:19 AM	Application	6,878 KB

 **Copy configsetting file and paste in C drive at C:\MorphoRdServiceLOsoft folder**

b. After installation now restart Morpho service from “**Search/Run Window**”

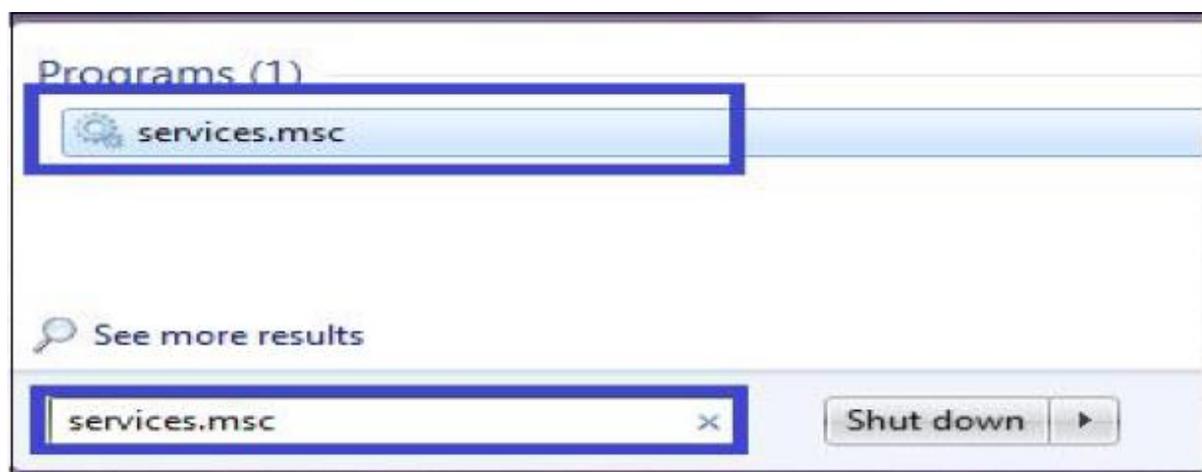

- c. Right Clicks on “Morpho RD Services” menu and click on Restart option.

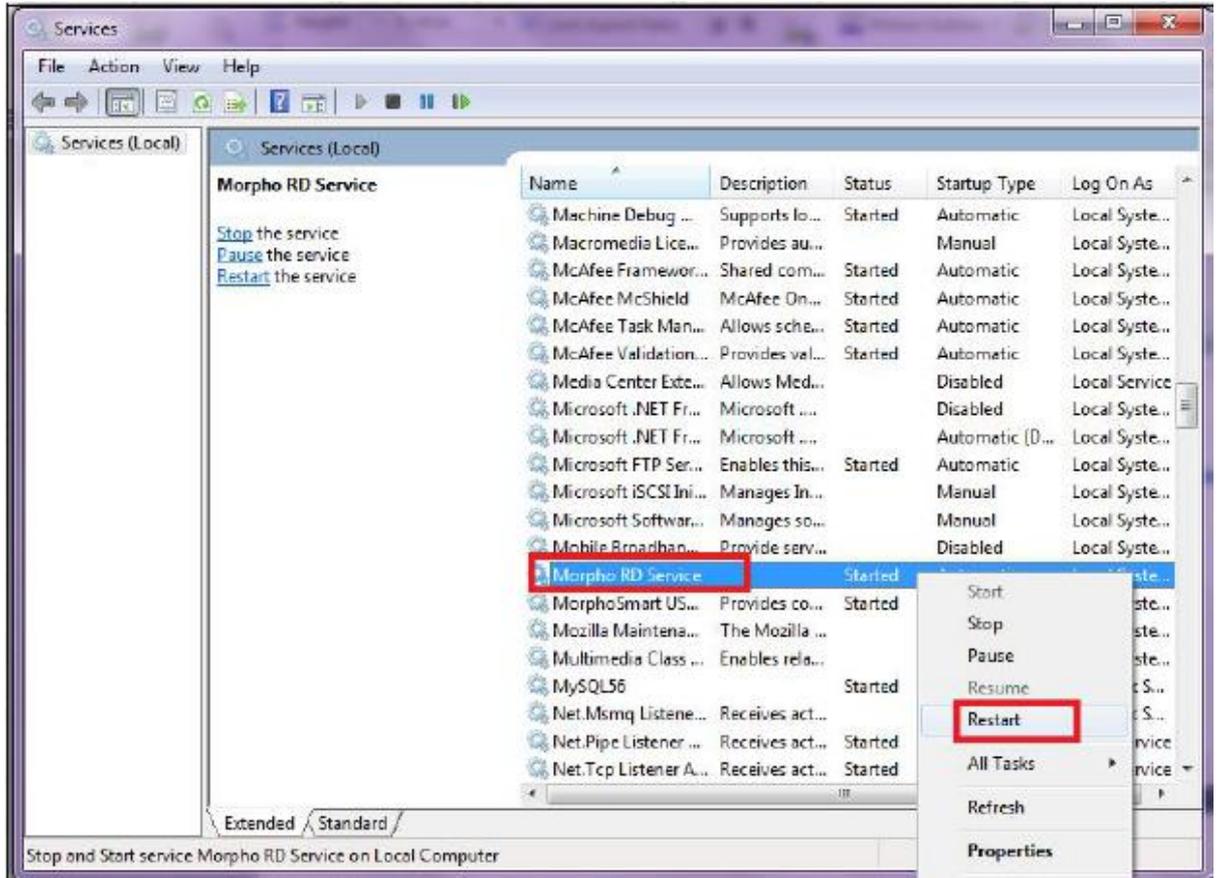

Now Morpho Bio Metric device has been started for further process...